



Doorbell Wifi Cam!

DOORBELL CAMERA

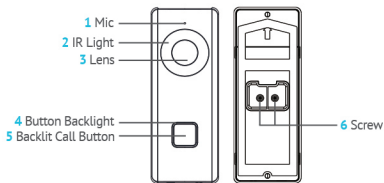

1. Mic
2. IR Light
3. Lens
4. Button Backlight
5. Backlit Call Button
6. Screw

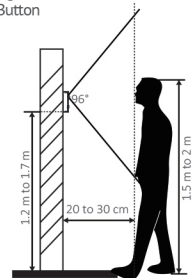

Reference Installation Distance

Blacklight Indicator:

 
- Starting up
- Ready for Wi-Fi configuration
- The Doorbell is upgrading
- The Doorbell is calling the App
- WiFi connection or MicroSD card error

To reset the camera, press and hold the RESET button for 5 seconds



SMART, CONVENIENT, RELIABLE
Doorbell From Your Trusted
Surveillance System Company

ACCESSORIES



Power Connector



Power Cable



Resistor



Screw Drivers



Surveillance Stickers



Hexagonal Security Screw



Mounting Screws



Quick Start Guide

More from LaView



4K Network Video Recorder



2MP & 4MP
WIFI Dome Camera



1080P
WIFI Bullet Camera



1080P
Outdoor WIFI Camera



1080P
WIFI Camera



1080P
Pan Tilt WIFI Camera

QUICK START GUIDE



Doorbell
WiFi Camera


1 Remove existing doorbell

Turn off the power at the breaker. Remove your existing doorbell and disconnect the cables




2 Connect the Doorbell camera to existing cables

Remove the faceplate from the doorbell camera and connect the doorbell camera to the existing doorbell wiring. Use the included power connector if needed.

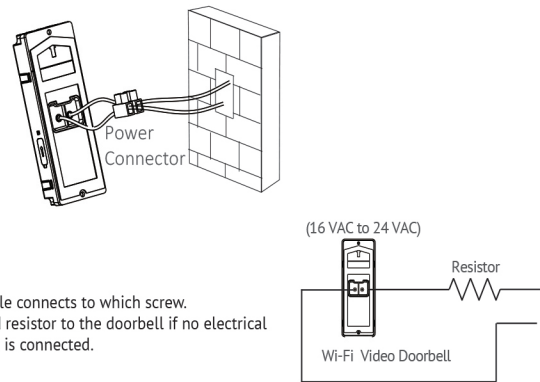


- It doesn't matter which cable connects to which screw.
- Please connect the included resistor to the doorbell if no electrical chime or mechanical chime is connected.

3 Choose the faceplate that best matches your frontdoor. Mount the faceplate with the included security screws. Then restore your home power at the breaker.

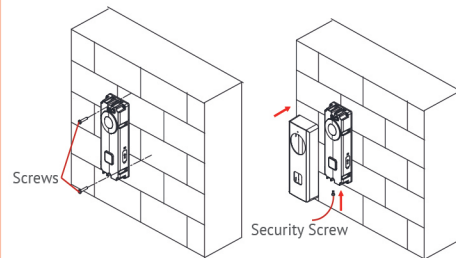

4 Complete the in-app setup

Download and install **LaView Connect** from App Store or Google Play Store. Select the option to add a new device. Select **Doorbell Security Camera** and follow the in-app instructions

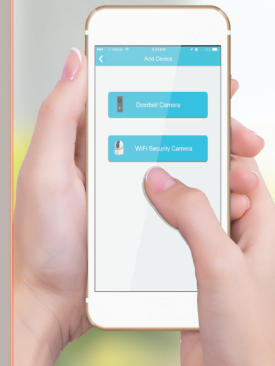

LaView Connect



For more instruction and video tutorials, visit: [lviewsecurity/support](https://lviewsecurity.com/support)