

Step 5. Configure start up wizard

Select the screen resolution from the drop-down menu based on your TV/monitor's resolution.

Resolution

System Resolution: 1024 \* 768/60HZ

Check this box if you wish to see this wizard again after you reboot your system.

Wizard

☒ Start wizard when device starts?

We strongly recommend that you change the default Admin password '12345' for better security protection.

Wizard

Admin Password

\*\*\*\*\*

New Admin Password

New Password

Confirm

Select the applicable time zone, date/time format, and time.

Wizard

Time Zone

(GMT-08:00) Pacific Time US & Canada

Date Format

MM-DD-YYYY

System Format

09-29-2014

System Time

18:14:37

We recommend checking 'Enable DHCP' even if your DVR is not connected to the internet, this will automatically get the DVR IP address.

Wizard

NIC Type

10M/100M Self-adaptive

Enable DHCP

☒

IPv4 Address

192.0.0.64

The wizard will show additional network information, click 'Next' to proceed.

Wizard

Server Port

8000

HTTP Port

80

RTSP Port

8554

To initialize the hard drive click the 'Init' box otherwise the DVR will NOT record.

Wizard

Capacity	Status	Property	Type	Free Space
<input checked="" type="checkbox"/> 1 465.76GB	Normal	R/W	Local	464GB

If you wish to add an IP camera click 'Search' otherwise, click 'Next' to proceed.

Wizard

IP Address	Amount	Model
<input checked="" type="checkbox"/> 1 192.168.1.36	1	CMIP3412

Choose continuous or motion detection recording from the listed options. Check the 'Start Recording' box to initialize recording. Click 'Ok' to finish the wizard.

Wizard

☒ Start Recording

☒ Continuous

What is in the box?

Laview Digital Video Recorder

Laview Analog Cameras

Siamese BNC Cables

1-4/8 Camera Power Splitter

Mouse

Remote Control

DVR Power Adapter

Camera Power Adapter

Quick Start Guide

Warranty Card

Security Stickers

1 Power LED

2 Status LED

3 Tx/Rx LED

4 Video In

5 USB Port

6 HDMI Port

7 VGA Port

8 Audio I/O

9 LAN

10 RS-485

11 12V

12 Power

Indicates if the DVR is powered on

Indicates if the Hard Drive is working

Indicates if the Network is active

Connects cameras via BNC cables

Connects to a USB mouse or flash drive

Connects to HDTV or computer monitor

Connects to TV or computer monitor

Connects an extra microphone/speaker (not included)

Connects to your router

Connection for additional PTZ camera (not included)

Connects the 12V DC Power Supply

Power Switch

Troubleshooting

Problem	Solution
No display/No signal/Invalid format	<div><div><input type="checkbox"/> Make sure the VGA/HDMI cable is properly connected to both the DVR and TV/monitor</div><div><i>NOTE: A laptop cannot be used as a screen</i></div><div><input type="checkbox"/> Make sure your TV/monitor is on the correct video input (e.g. HDMI1, HDMI2, etc.)</div><div><input type="checkbox"/> Try switching to another 1080p TV/monitor and adjust the output resolution in the DVR menu</div><div><input type="checkbox"/> On the front of the DVR check that the power LED light is on</div></div>
No picture/No video	<div><div><input type="checkbox"/> Make sure the camera is completely connected to the power splitters well as the Video In plug</div></div>
Cannot log in	<div><div><input type="checkbox"/> The default user name is: <b>admin</b> and the default password is: <b>12345</b>. If you don't remember your old password, please submit a ticket to us at <a href="http://www.laviewusa.com/contact/">www.laviewusa.com/contact/</a>.</div></div>
Camera picture is not clear	<div><div><input type="checkbox"/> Make sure the camera is not placed behind a window, there is no interference or a strong light source in front of the camera</div><div><input type="checkbox"/> In DVR Menu&gt;Record&gt;Parameter&gt;Resolution, set the sub stream resolution to CIF for all channels</div><div><input type="checkbox"/> Move the camera to a different location and/or direction</div><div><i>NOTE: The live view (sub stream) resolution is NOT the actual image quality recorded (Main stream); Connection of excessive length (over 200ft) of BNC cable will drop the camera image quality; Working at extreme weather condition (below -40F or above 140F) will drop the image quality and damage the camera.</i></div></div>
Night vision is not working	<div><div><input type="checkbox"/> The infrared activates automatically when the environment is dark enough. You can check that the camera infrared bulbs are working properly as they turn light red in dark environments</div></div>
DVR is not recording	<div><div><input type="checkbox"/> Check that the hard drive status is normal and is initialized under the Main Menu&gt;HDD&gt;General</div><div><input type="checkbox"/> Enable the record mode (Normal or Motion Detection) under the Main Menu&gt;Record&gt;Schedule&gt;Edit for the selected camera</div></div>



QUICK START GUIDE

Remote Viewing

View footage on your mobile devices with our app. You can either scan the provided QR code or search **LaView Net** in the app store.



Content may vary by model, including the number of channels, cameras, configuration, and hard drive capacity.


Questions?

Call us at: **626-898-4988** (M-F from 9am to 6pm PST)  
Open support ticket at: [www.laviewusa.com/contact](http://www.laviewusa.com/contact)  
Tutorial videos & user manual at: [www.laviewusa.com/support](http://www.laviewusa.com/support)

Copyright © LaView Eagle Eye Technology Inc. 2015

QUICK START GUIDE

We recommend testing all the cameras and cables prior to installation.

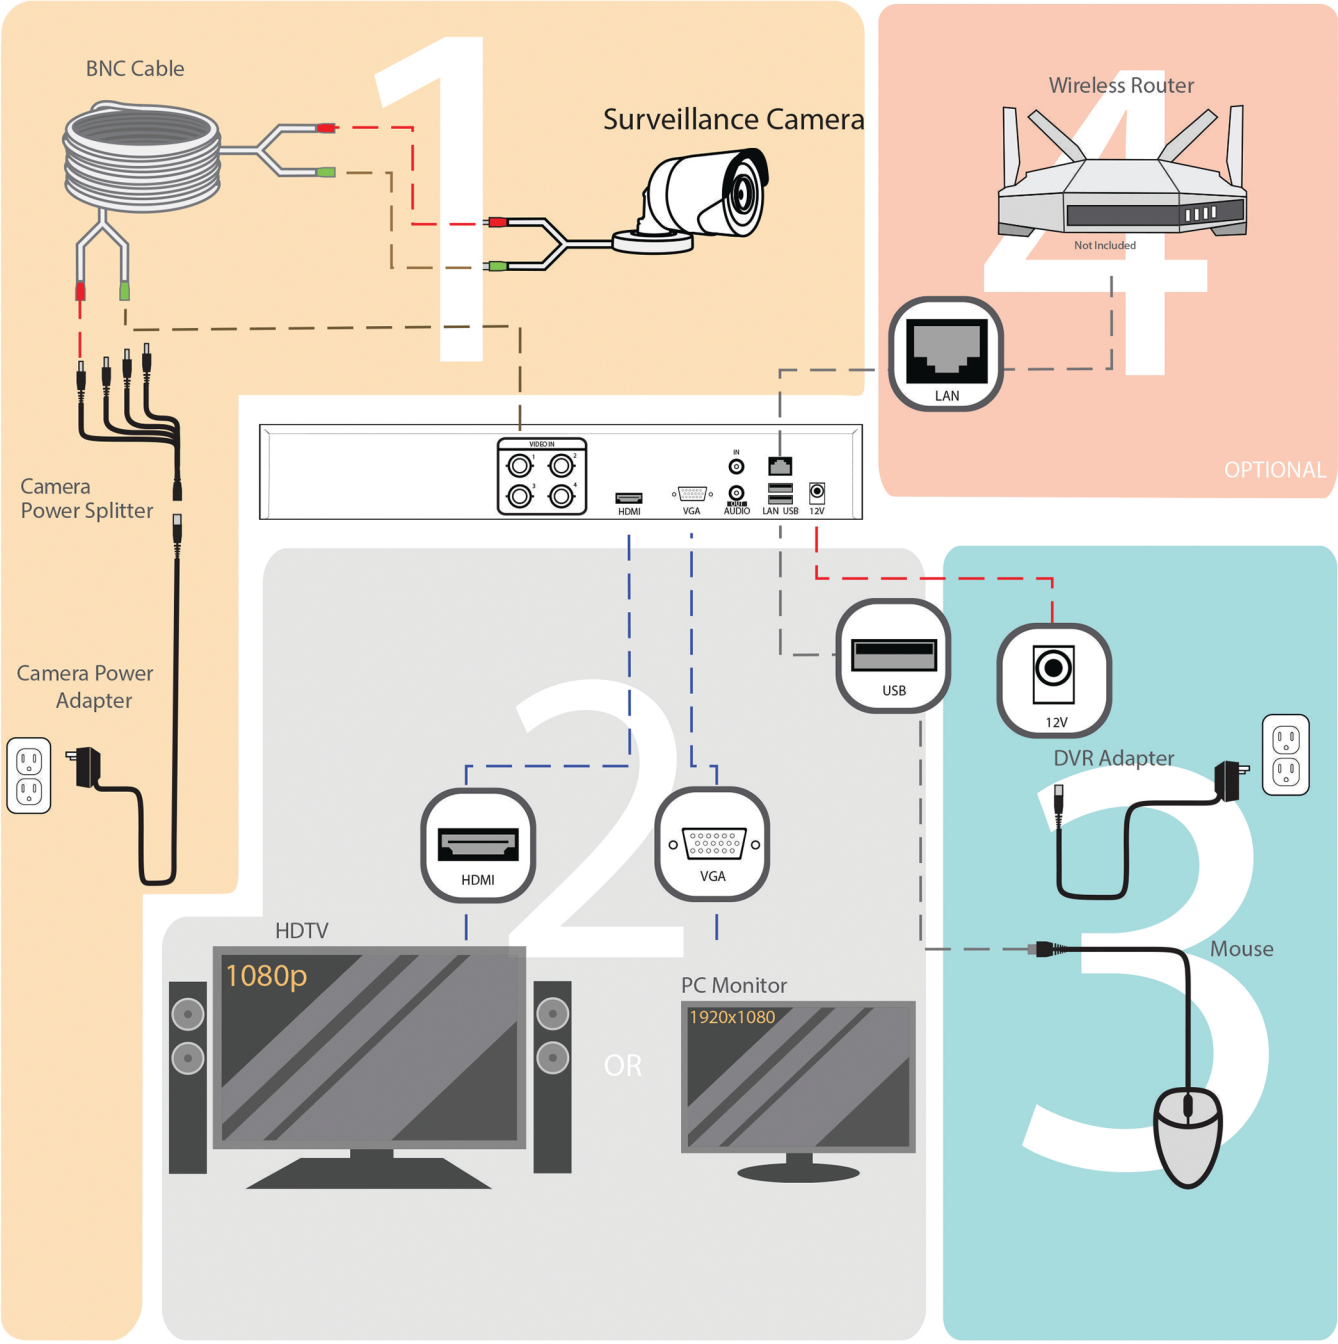

Step 1. Connect your cameras

- Connect the BNC plug and power plug of the siamese cable into the camera
- Connect the opposite BNC plug to the DVR Video IN and the power plug to the camera power splitter. (Repeat for all cameras)
- Connect the power splitter into camera power supply

Step 2. Connect to your monitor/TV

- Connect your DVR and TV/monitor with a HDMI or VGA cable (Not included)

Note: Your monitor/TV must support the output resolution of the DVR or you may get a black screen or a possible error message. You cannot use a laptop as a display.

Step 3. Connect the mouse and power

- Connect the mouse to the USB port
- Connect the 12V DVR power adapter to the DVR

Step 4. Connect to your network (OPTIONAL)

- Connect the LAN port on the DVR to the LAN port on your router via an Ethernet cable for remote viewing on your mobile phone, tablets, PC and Mac

Note: The DVR will still work as a standalone video recorder if you do not have internet connection and skip this step.

Step 5. Configure the start up wizard

- The connection is now completed. Turn on the power switch and follow the start-up wizard on your screen to configure the DVR. (next page)