

# Configure start up wizard

The Startup Wizard will help you set up your system, as well as connect it to your network.

If you reboot your system and want the wizard to start again check this box.

Wizard	
<input checked="" type="checkbox"/>	Start wizard when device starts?

You are required to set up a password with a minimum of 8 letters or numbers for better security protection

Wizard	
Admin Password	*****
New Admin Password	
New Password	
Confirm	

Select the applicable time zone, date/time format, and time.

Wizard	
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore
Date Format	MM-DD-YYYY
System Format	09-29-2014
System Time	18:14:37

We recommend checking 'Enable DHCP' even if your DVR is not connected to the internet, this will automatically get the DVR IP address.

Wizard	
NIC Type	10M/100M Self-adaptive
Enable DHCP	<input checked="" type="checkbox"/>
IPv4 Address	192.0.0.64

Enable LaView P2P to allow mobile Viewing

Wizard	
Enable	<input checked="" type="checkbox"/>
Access Type:	LaView P2P

The wizard will show additional network information, click 'Next' to proceed.

Wizard	
Server Port	8000
HTTP Port	80
RTSP Port	8554

To initialize the hard drive click the 'Init' box otherwise the DVR will not record.

Wizard				
Capacity	Status	Property	Type	Free Space
<input checked="" type="checkbox"/> 1 465.76GB	Normal	R/W	Local	464GB

If you wish to add an IP camera click 'Search' otherwise, click 'Next' to proceed.


Wizard		
IP Address	Amount	Model
<input checked="" type="checkbox"/> 1 192.168.1.36	1	CMIP3412

Choose continuous or motion detection recording from the listed options. Check the 'Start Recording' box to initialize recording. Click 'Ok' to finish the wizard.

Wizard	
<input checked="" type="checkbox"/>	Start Recording
<input type="radio"/>	Continuous
<input type="radio"/>	Motion Detection

## QUICK REMOTE VIEW SETUP

View your cameras from anywhere! Access is as easy as a simple code scan.

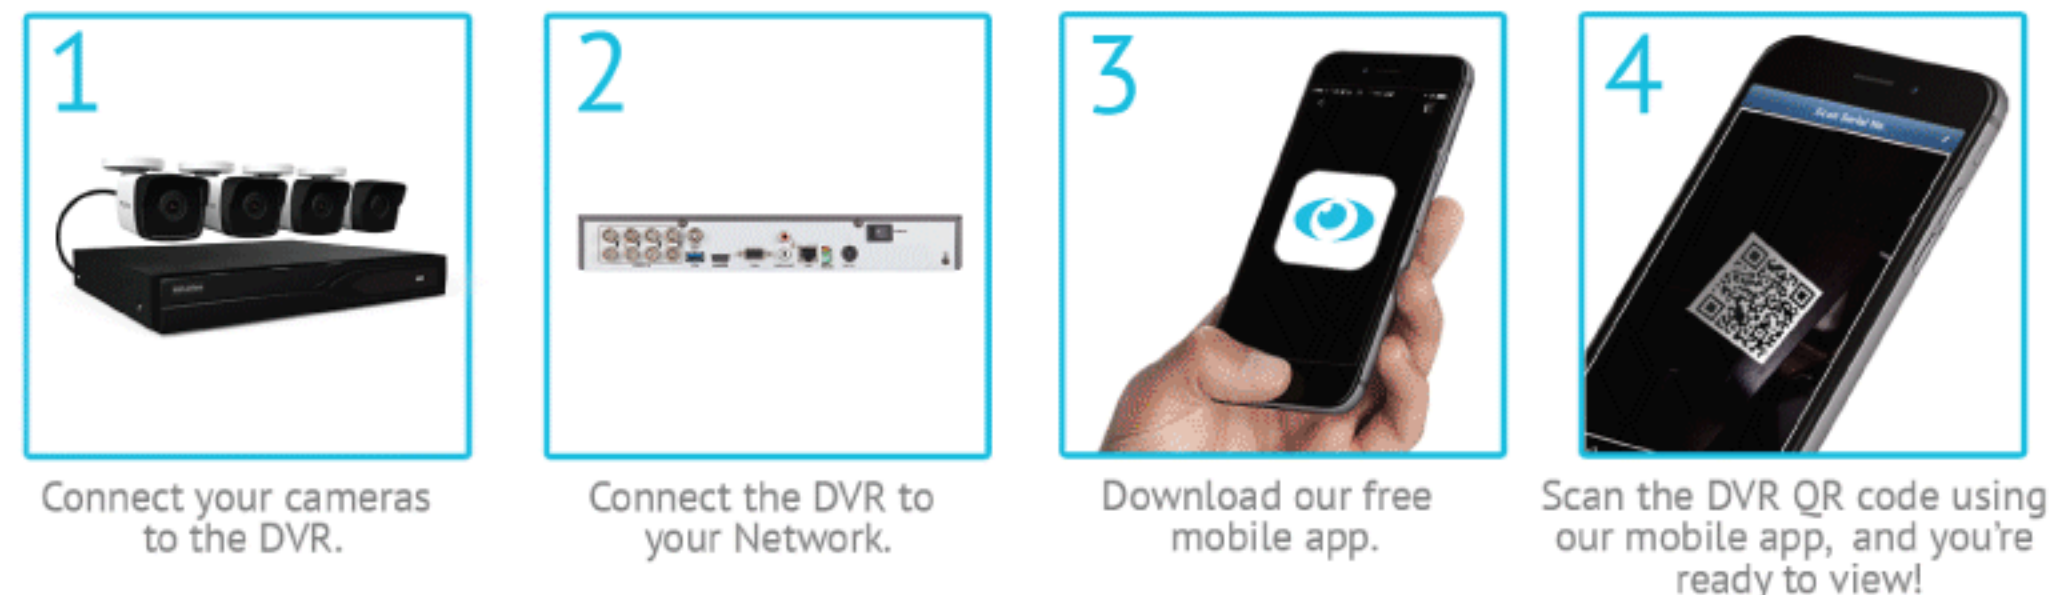

LaView NET



Scan For App



## Smart Video Surveillance System



## Quick Start Guide

## Troubleshooting

Problem	Possible Solution(s)
No display/No signal/Invalid format	<ul style="list-style-type: none"> <li>Make sure the VGA/HDMI cable is properly connected to both the DVR and TV/monitor. <i>NOTE: A laptop cannot be used as a screen</i></li> <li>Make sure your TV/monitor is on the correct video input (e.g. HDMI1, HDMI2, etc.)</li> <li>Try switching to another 1080p TV/monitor and adjust the output resolution in the DVR menu</li> <li>On the top of the DVR check that the power LED light is on</li> </ul>
No picture/No video	<ul style="list-style-type: none"> <li>Make sure the camera is completely connected to the power splitters well as the Video In plug</li> </ul>
Cannot log in	<ul style="list-style-type: none"> <li>Enable LaView P2P to allow mobile Viewing. If you don't remember your old password, please submit a ticket to us at <a href="http://www.laviewusa.com/contact/">www.laviewusa.com/contact/</a>.</li> </ul>
Camera picture is not clear	<ul style="list-style-type: none"> <li>Make sure the camera is not placed behind a window, there is no interference or a strong light source in front of the camera</li> <li>In DVR Menu&gt;Record&gt;Parameter&gt;Resolution, set the sub stream resolution to CIF for all channels</li> <li>Move the camera to a different location and/or direction</li> </ul> <p><i>NOTE: The live view (sub stream) resolution is NOT the actual image quality recorded (Main stream); Connection of excessive length (over 600ft) of BNC cable will drop the camera image quality; Working at extreme weather condition (below -40F or above 140F) will drop the image quality and damage the camera.</i></p>
Night vision is not working	<ul style="list-style-type: none"> <li>The infrared activates automatically when the environment is dark enough. You can check that the camera infrared bulbs are working properly as they turn light red in dark environments</li> </ul>
DVR is not recording	<ul style="list-style-type: none"> <li>Check that the hard drive status is normal and is initialized under the Main Menu&gt;HDD&gt;General</li> <li>Enable the record mode (Normal or Motion Detection) under the Main Menu&gt;Record&gt;Schedule&gt;Edit for the selected camera</li> </ul>

## Need Additional Help?

Contact our technicians via email at: [info@laviewusa.com](mailto:info@laviewusa.com) or fill out a form at: [www.laviewsecurity.com/contact](http://www.laviewsecurity.com/contact)  
Your protection is our priority!



Included			May be required But not included
Power Adapter (2)	Power Splitter	60ft BNC Cables (4)	TV / Monitor
Operating Instructions	Mouse	Network Cable	Router
Hard Drive *	Quick Start Guide	Theft Deterrent Stickers (2)	

\* varies by models


# DVR Quick Start Guide



- 1. Power Adapters
- 2. Power Splitter
- 3. Network Cable
- 4. Mouse
- 5. HDMI Cable
- 6. BNC Cables


## Back Panel Connectors

- 1. BNC Video In
- 2. HDMI
- 3. VGA
- 4. Audio
- 5. LAN
- 6. USB
- 7. Power

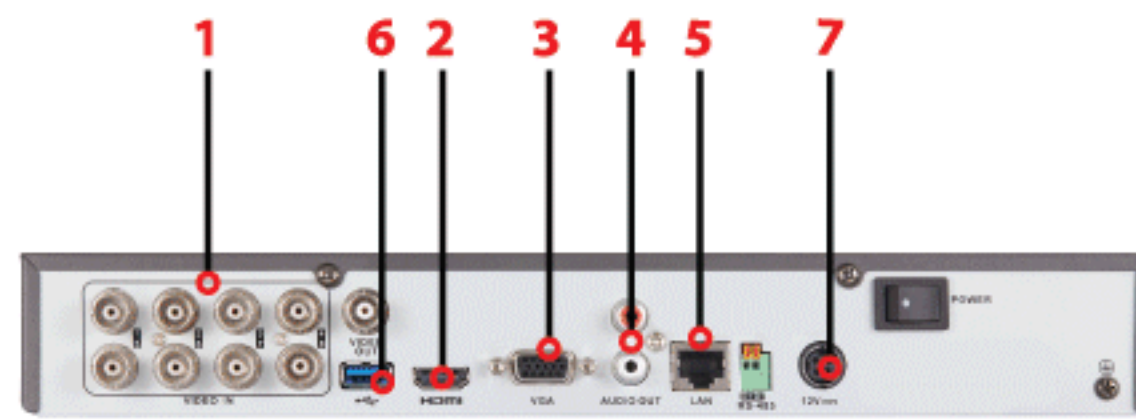

## Connect Power Splitter to Power adapter


3

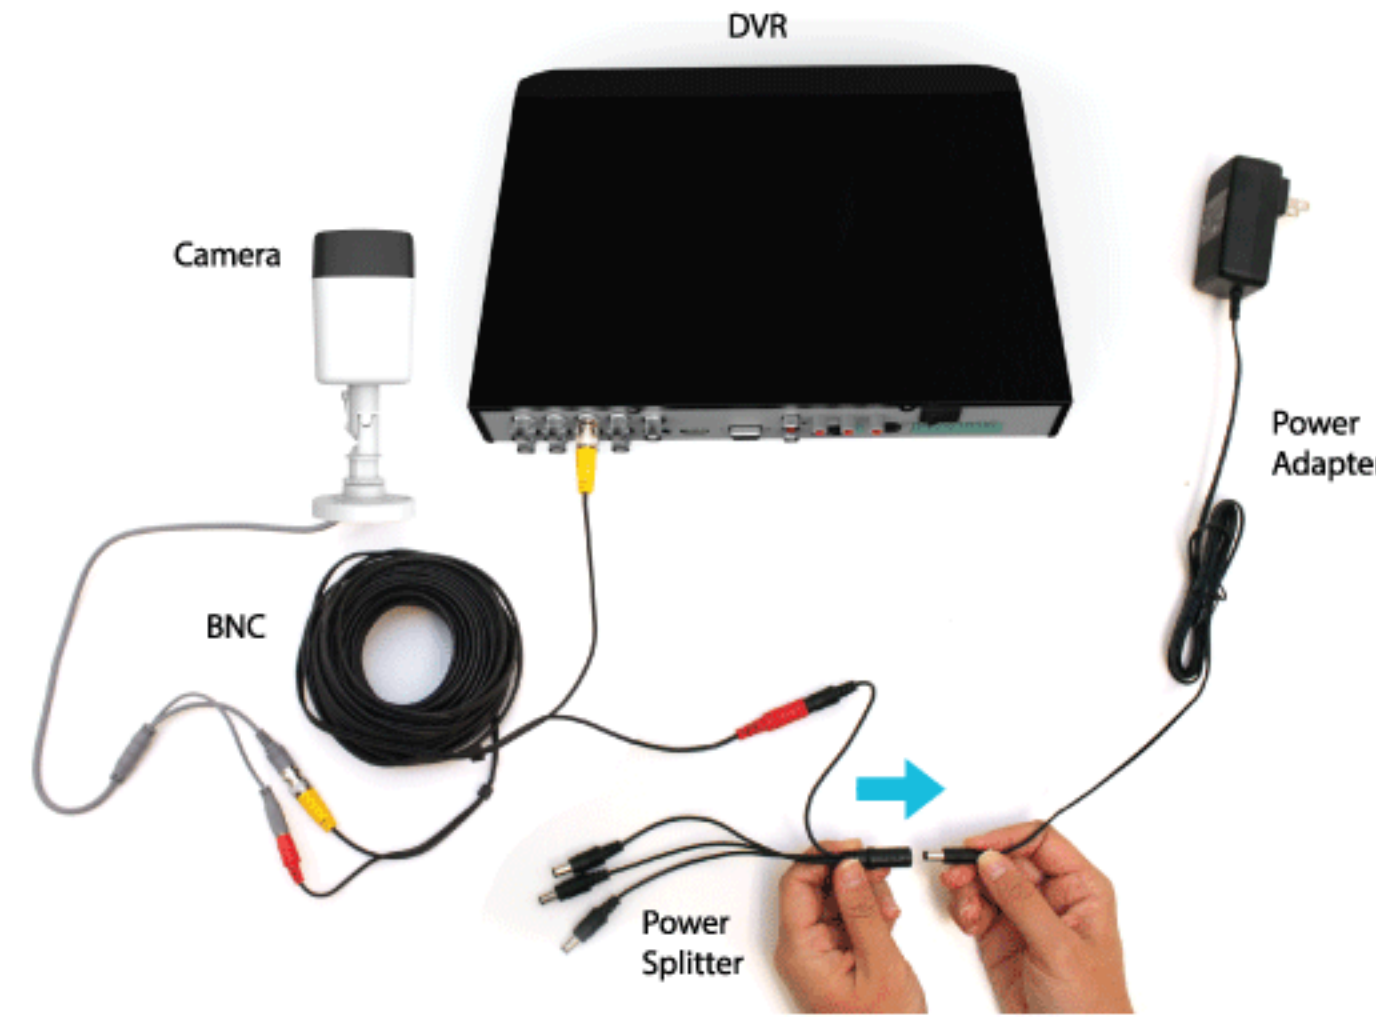

Connect the power splitter into the camera power adapter.

## Connect DVR to Power Adapter


5

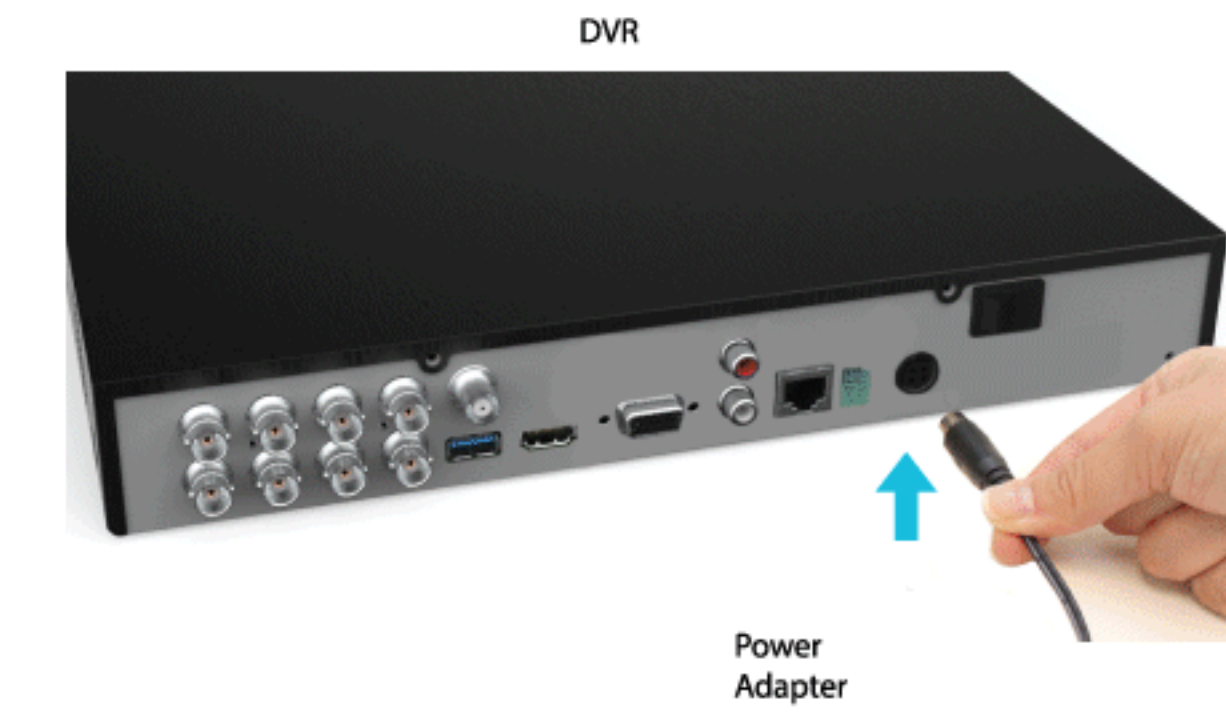

Connect the 12V DVR power adapter to the DVR (7).

## Connect your Cameras


1

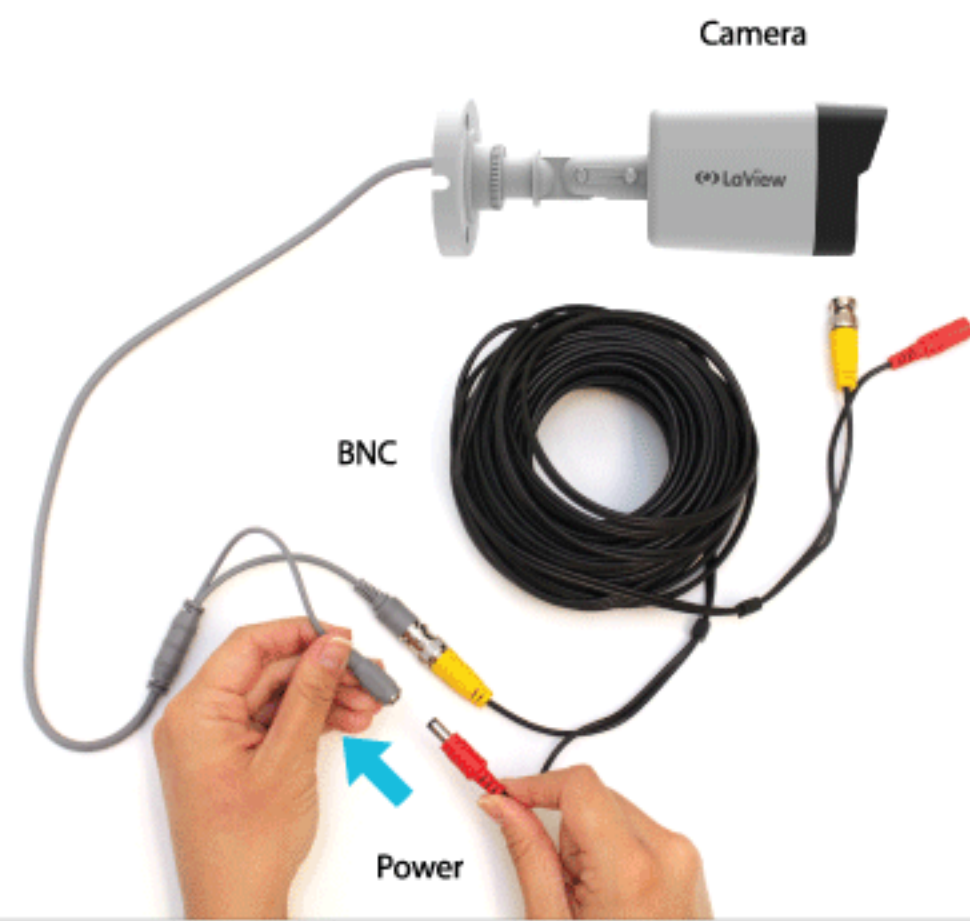

Connect the BNC plug and power plug of the siamese cable into the camera.

## Connect to TV/ Monitor (Option A)

4a

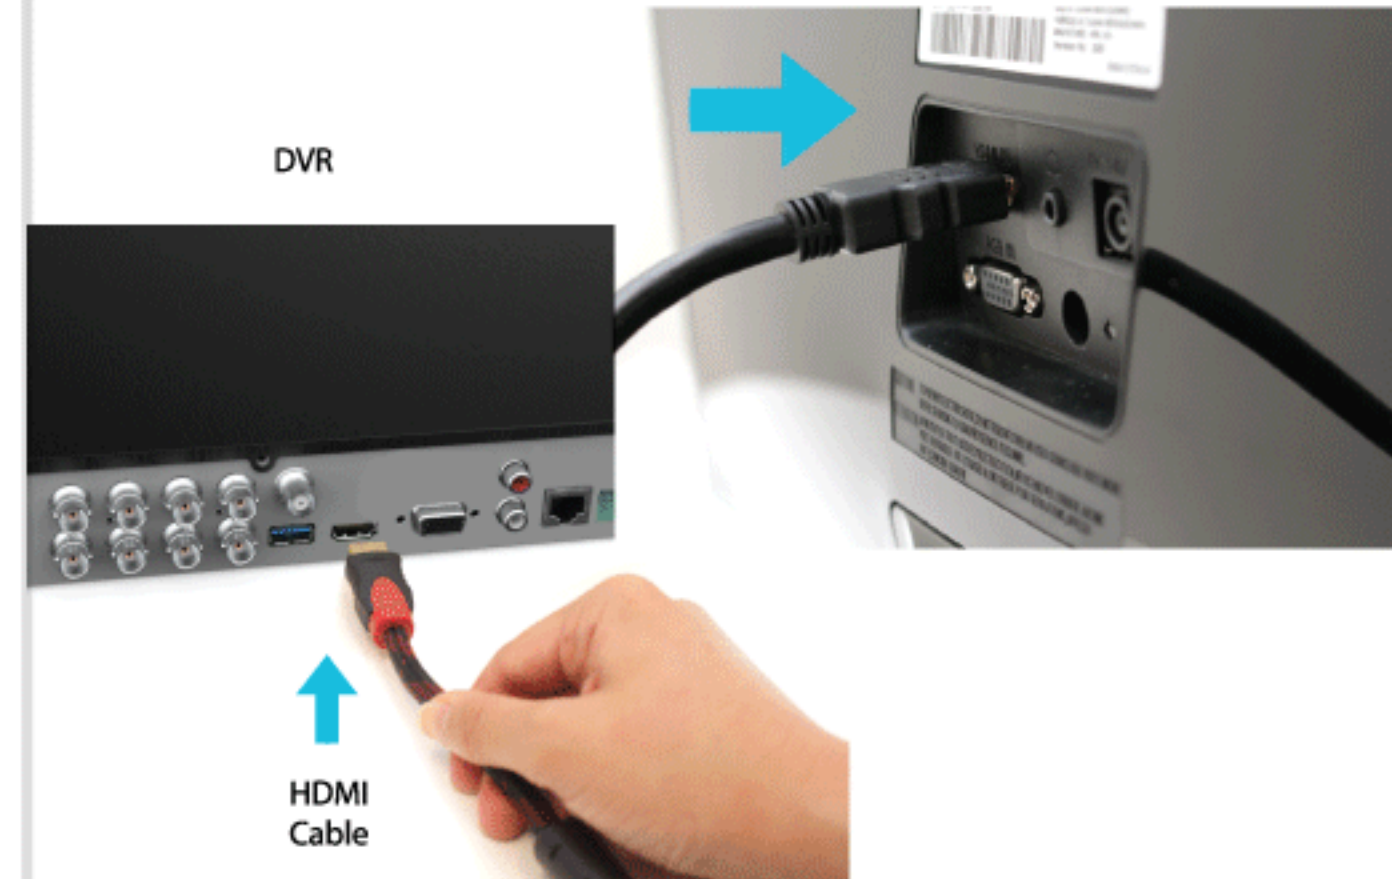

Connect the HDMI cable to the HDMI port (2). Connect the other end to the TV/Monitor.

Note: A laptop cannot be used as a monitor

## Connect Mouse to USB Port


6



Connect the mouse to the USB port (6).

## Connect Cameras to Power Splitter

2

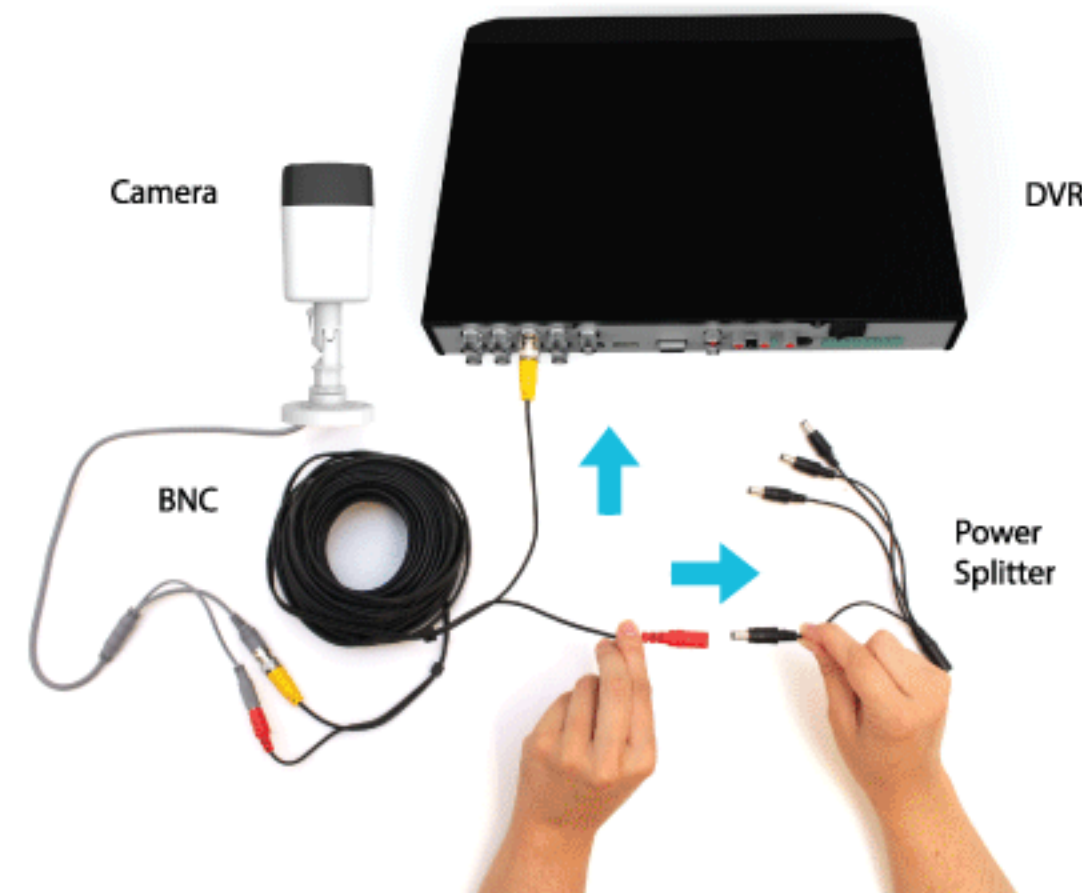

1. Connect the opposite BNC plug into the DVR Video in port (1).
2. Connect the power plug into the camera power splitter. (Repeat for all cameras)

## Connect to TV/ Monitor (Option B)

4b




Alternatively you can connect the VGA cable to the VGA port (3) Connect the other end to the TV/Monitor. (VGA cable Not included)

Note: A laptop cannot be used as a monitor

## Connect Ethernet cable to Router

7

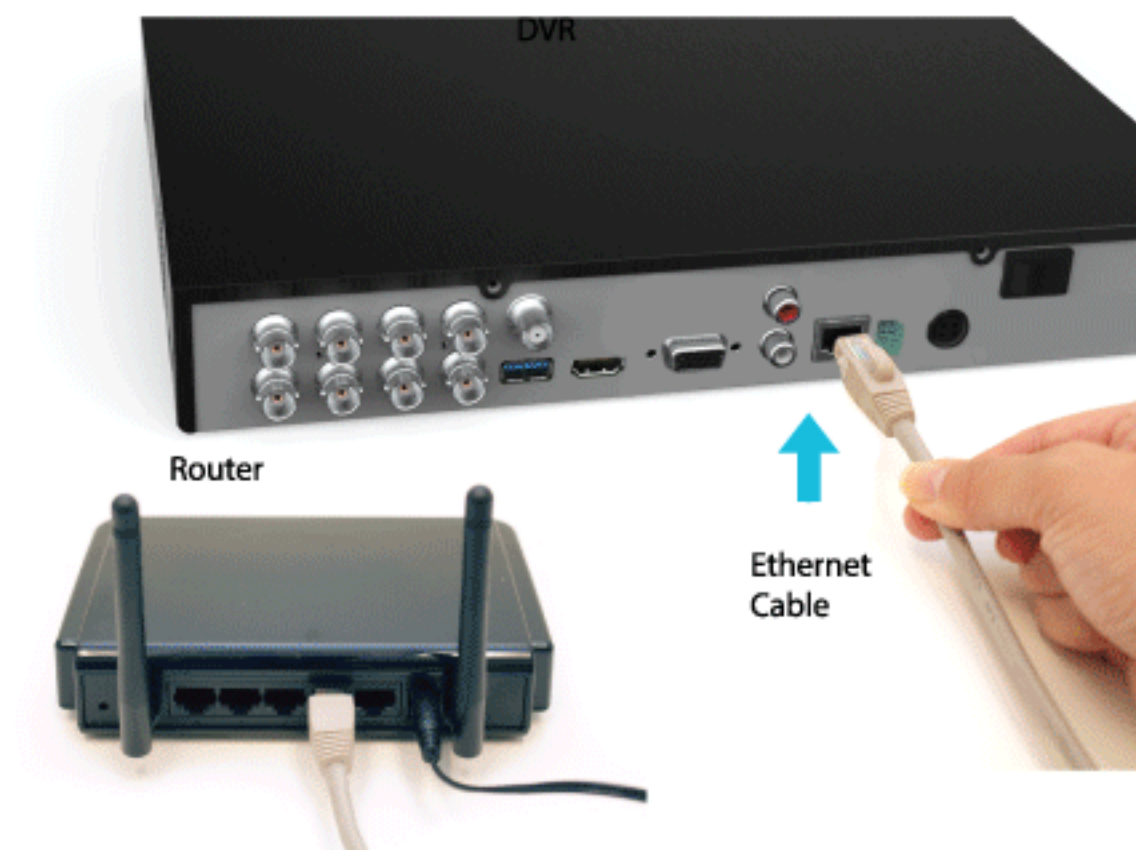

Connect the LAN port on the DVR to the LAN port (5) on your router via an Ethernet cable for remote viewing on your mobile phone, tablets, PC and Mac.

The DVR will still work as a standalone video recorder if