



5 Configure start up wizard

The Startup Wizard will help you set up the remote viewing from your mobile device. Internet connection (Step 4 from previous page) is needed for this step.


Download LaView Mobile from the APP Store by scanning the QR code.

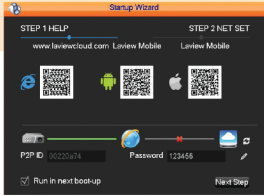

Check the DHCP box to ensure the communication between the DVR and your router.

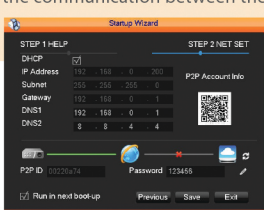


In Laviw Mobile APP, Press '+ Device' button.

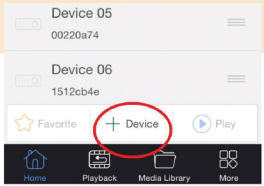

Type in here the P2P ID and password from the Wizard. Click on 'Save'



Back to the Home page, click on the device you just added and select the channel you wish to view. Then click the 'Play' button.

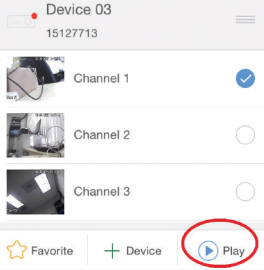

Now you should be able to view all the cameras from your mobile device

What is in the box?

Digital Video Recorder
Analog Cameras
Siamese BNC Cables
Camera Power Splitter
Mouse
Remote Control

DVR Power Adapter
Camera Power Adapter
Quick Start Guide
Warrenty Card
Security Stickers



- | | |
|--|--|
| 1 Power LED Indicates if the DVR is powered on | 7 VGA Port Connects to TV or computer monitor |
| 2 Status LED Indicates if the Hard Drive is working | 8 Audio I/O Connects an extra microphone/speaker (not included) |
| 3 Tx/Rx LED Indicates if the Network is active | 9 LAN Connects to your router |
| 4 Video In Connects cameras via BNC cables | 10 RS-485 Connection for additional PTZ camera (not included) |
| 5 USB Port Connects to a USB mouse or flash drive | 11 12V Connects the 12V DC Power Supply |
| 6 HDMI Port Connects to HDTV or computer monitor | 12 Power Power Switch |

Troubleshooting

Problem	Solution
No display/No signal/Invalid format	<ul style="list-style-type: none">Make sure the VGA/HDMI cable is properly connected to both the DVR and TV/monitorNOTE: A laptop cannot be used as a screenMake sure your TV/monitor is on the correct video input (e.g. HDMI1, HDMI2, etc.)Try switching to another 1080p TV/monitor and adjust the output resolution in the DVR menuOn the front of the DVR check that the power LED light is on
No picture/No video	<ul style="list-style-type: none">Make sure the camera is completely connected to the power splitters as well as the Video IN plug
Cannot log in	<ul style="list-style-type: none">The default user name is: admin and the default password is: 123456. If you don't remember your old password, please submit a ticket to us at www.laviewusa.com/contact/.
Camera picture is not clear	<ul style="list-style-type: none">Make sure the camera is not placed behind a window, there is no interference or a strong light source in front of the cameraIn DVR Menu>Camera>Parameter, set the sub stream resolution to D1 for all channelsMove the camera to a different location and/or directionNOTE: The live view (sub stream) resolution is NOT the actual image quality recorded (Main stream); Connection of excessive length (over 900ft) of BNC cable will drop the camera image quality; Working at extreme weather condition (below -14F or above 140F) will drop the image quality and damage the camera.
Night vision is not working	<ul style="list-style-type: none">The infrared activates automatically when the environment is dark enough. You can check that the camera infrared bulbs are working properly as they turn light red in dark environments
DVR is not recording	<ul style="list-style-type: none">Check that the hard drive status is normal and is initialized under the Main Menu>System > Storage.Enable the record mode (Manual or Schedule) under the Main Menu>Record > Record Mode, edit for the selected cameras.



COMPLETE SURVEILLANCE SYSTEM QUICK START GUIDE

Remote Viewing

View footage on your mobile devices with our app. You can either scan the provided QR code or search **LaView Mobile** in the app store.



LaView Mobile



SCAN TO DOWNLOAD

Content may vary by model, including the number of channels, cameras, configuration, and hard drive capacity.

Questions?


Call us at: **626-898-4988** (M-F from 9am to 6pm PST)
Open support ticket at: www.laviewusa.com/contact
Tutorial videos & user manual at: www.laviewusa.com/support

Copyright © LaView Eagle-Eye Technology Inc. 2015

www.laviewusa.com

QUICK START GUIDE

We recommend testing all the cameras and cables prior to installation.

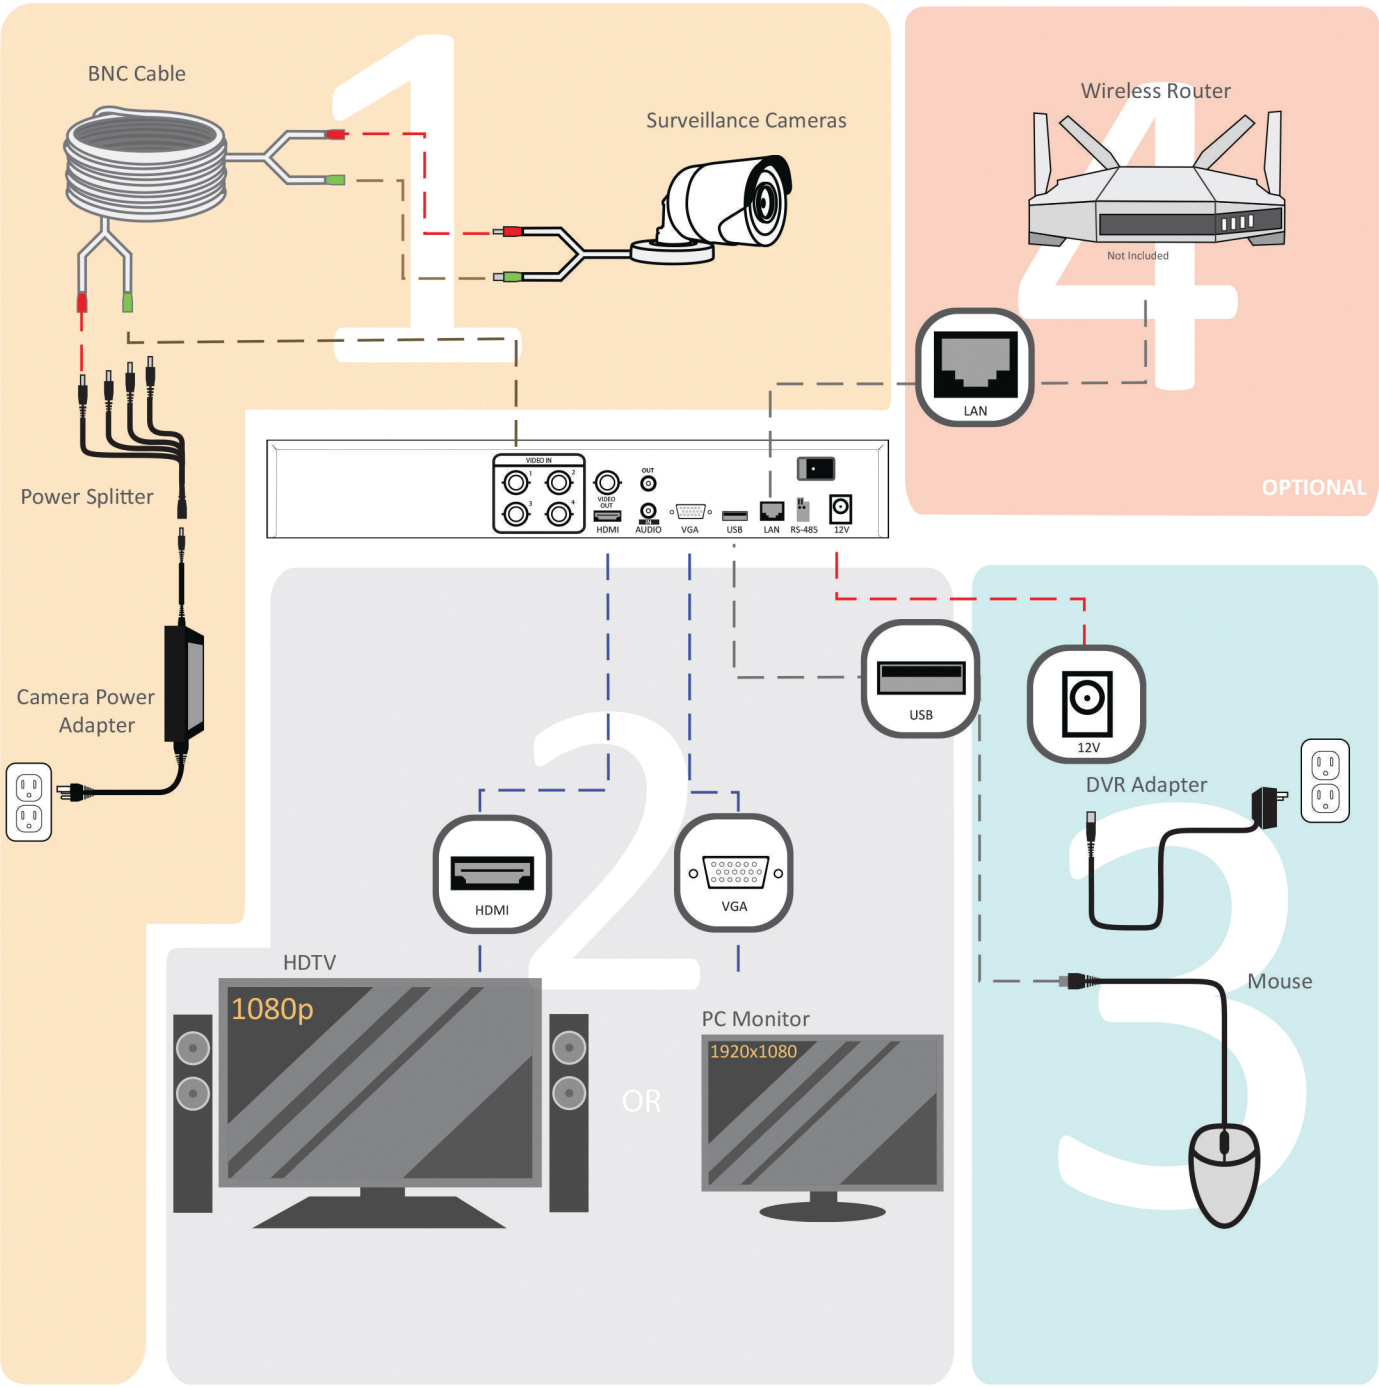

1 Connect your cameras

- Connect the BNC plug and power plug of the siamese cable into the camera
- Connect the opposite BNC plug into the DVR VIDEO IN port and the power plug into the camera power splitter (Repeat for all cameras)
- Connect the power splitter into camera power supply

2 Connect to your monitor/TV

- Connect your DVR and TV/monitor with a HDMI or VGA cable (Not included)

Note: Your monitor/TV must support the output resolution of the DVR or you may get a black screen or a possible error message. You cannot use a laptop as a display.

3 Connect the mouse and power

- Connect the mouse to the USB port
- Connect the 12V DVR power adapter to the DVR

4 Connect to your network (OPTIONAL)

- Connect the LAN port on the DVR to the LAN port on your router via an Ethernet cable for remote viewing on your mobile phone, tablets, PC and Mac

Note: The DVR will still work as a standalone video recorder if you do not have internet connection and skip this step.

5 Configure the start up wizard

- The connection is now completed. Turn on the power switch and follow the start-up wizard on your screen to configure the DVR. (next page)